


Winder Base

EEW Cone Winder Placement Diagram

Use this diagram to align the Winder Base and the Tensioner. You can either mount these items onto a board and screw them into place or clamp them down to a stable surface. The included Tensioner Clamp can hold the Tensioner in place, but to hold the Winder Base in place, you'll need to provide your own clamp. The back of the base has a flat edge that's easy to clamp, and your local hardware store should have a variety of clamps that will work.

It's very important to keep the centers aligned. If your cones don't fill evenly, double-check that these parts are centered correctly and the proper distance apart.

The distance between the Winder Base and Tensioner should be 16 inches (40 cm) or more. This drawing is to scale.

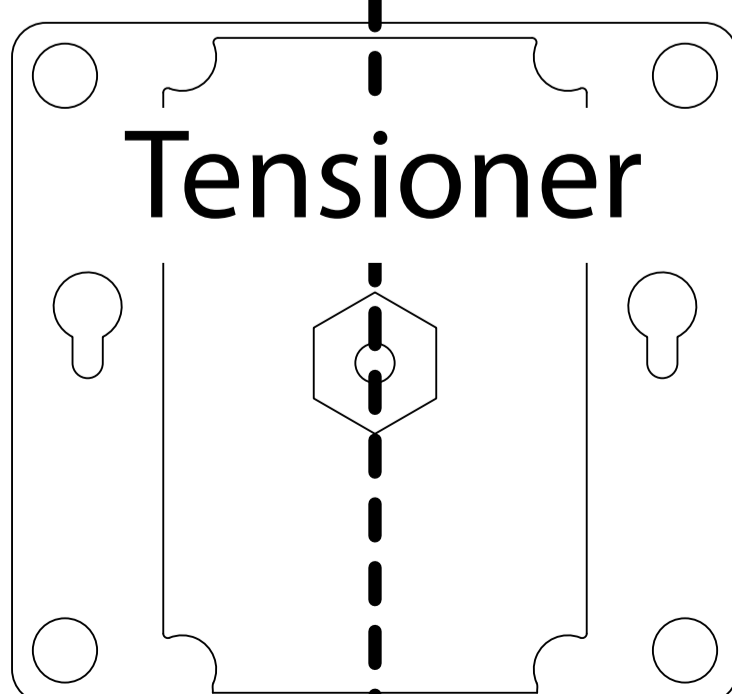

Tensioner